

How to use Jlink Tools to upgrade smart product

Scope: Swave / CTP / 1D1R-TS / 1R-TS / 2R-TS / 3R-TS / NDP

Installment instruction of J-link software:


1. The instruction of Setup_JLinkARM_V4081.zip locates at doc of installment.

Default installation path:

C:\Program Files\SEGGER\JLinkARM_V4081\Doc\UM08001_JLinkARM.pdf


2. The version of Setup_JLinkARM_V4081.zip is recommended to install if your system is XP. If your computer's system is win 7, Setup_JLinkARM_V410 i.zip or above version will be better.

The path of the drive program as below:

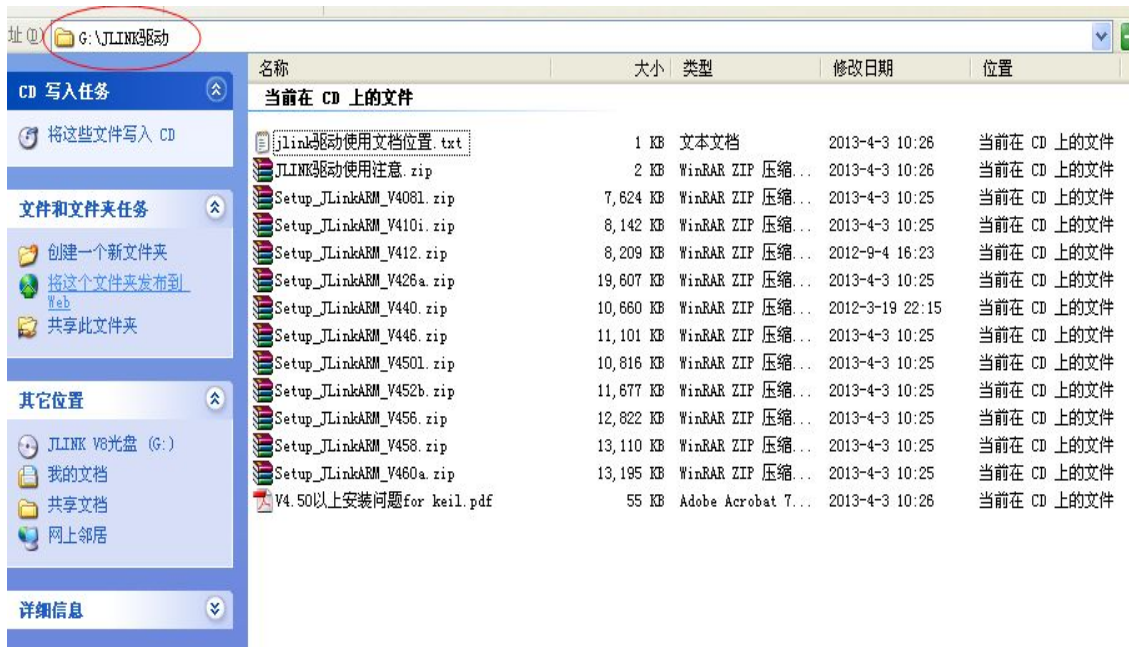



The step to update the program of S-wave/CTP/1D1R, take V4.32a version for example:

1. Install your Jlink ARM software in your computer by following the installation steps windows.
2. Run your Jlink ARM software


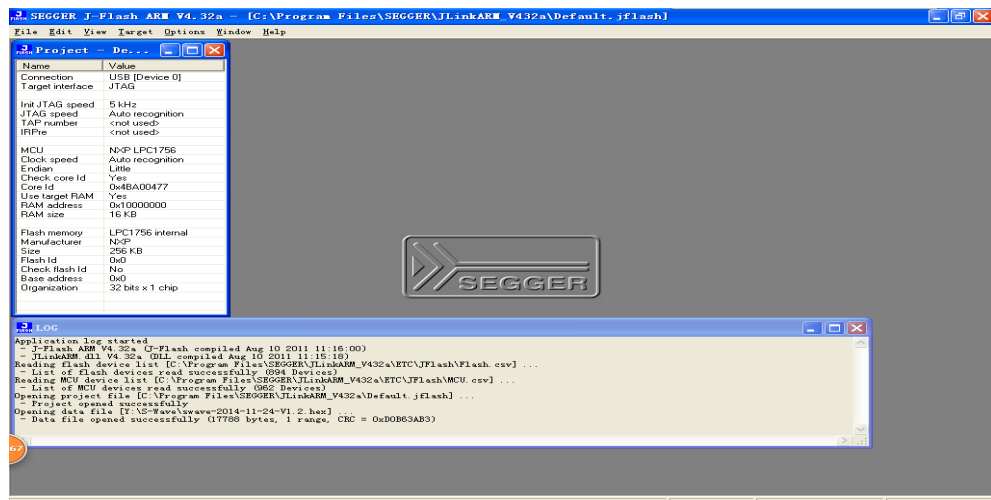


3. Jlink ARM software basic setting


- Click on the **Options** button
- Click on the **Project setting Button**

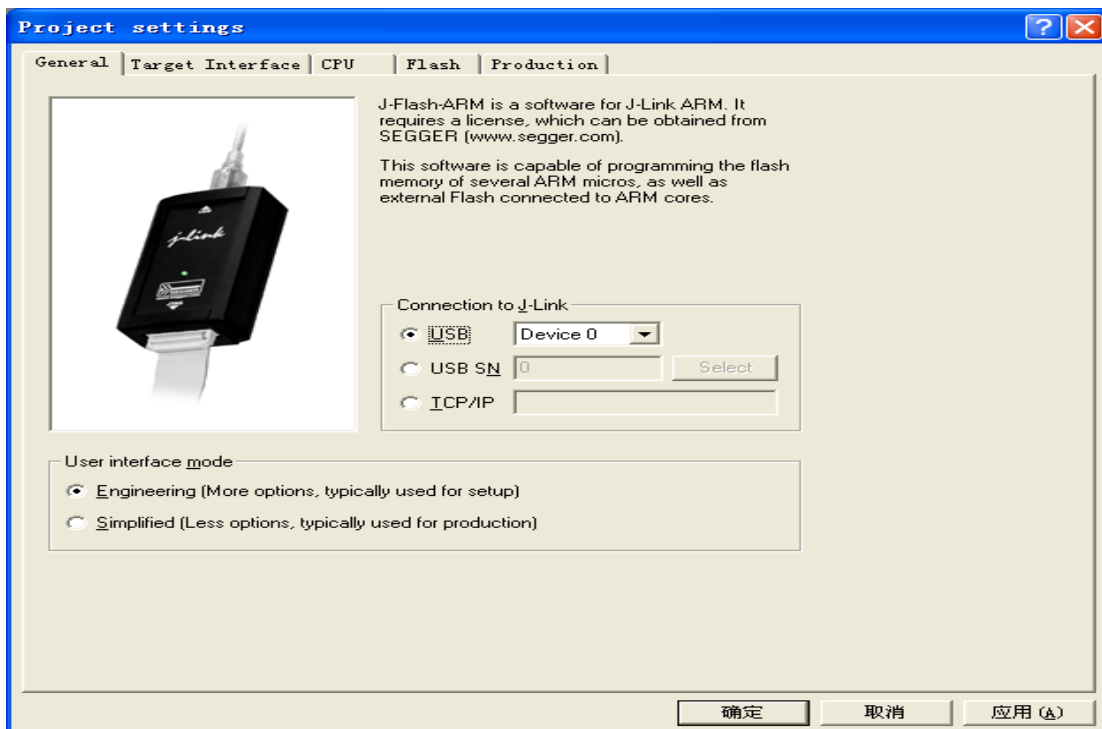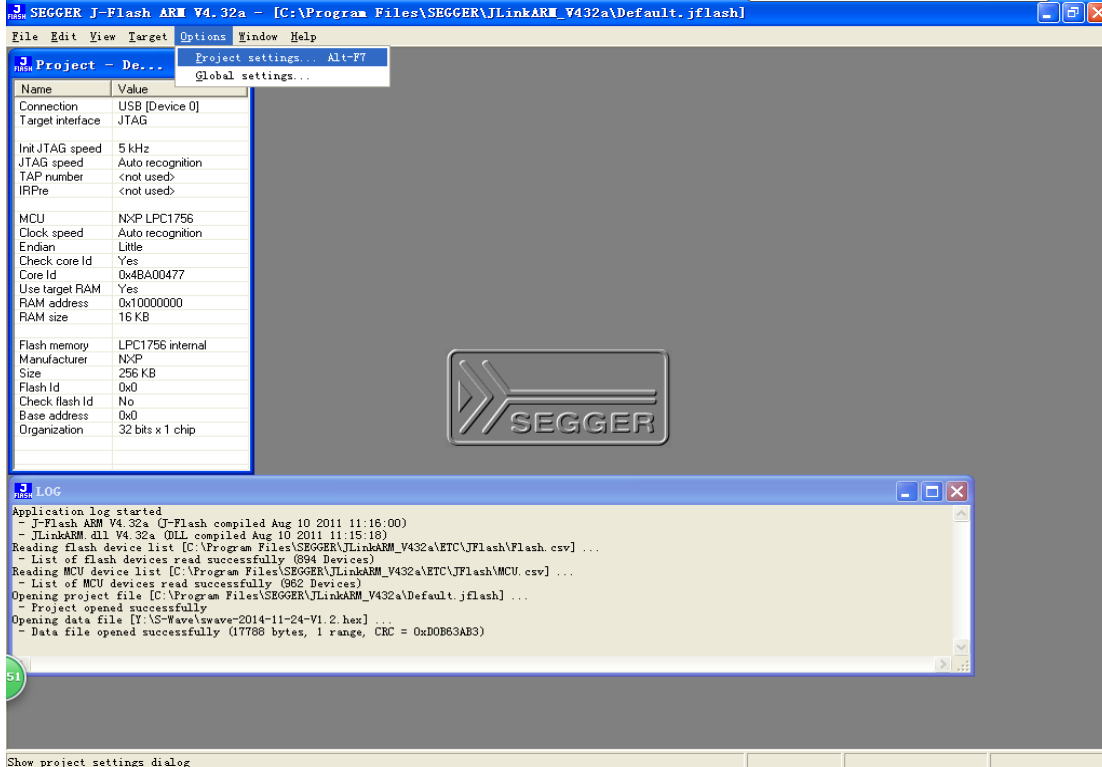

- Click on the **Target Interface** button
- Setting the JTAG and SWD as below and save it

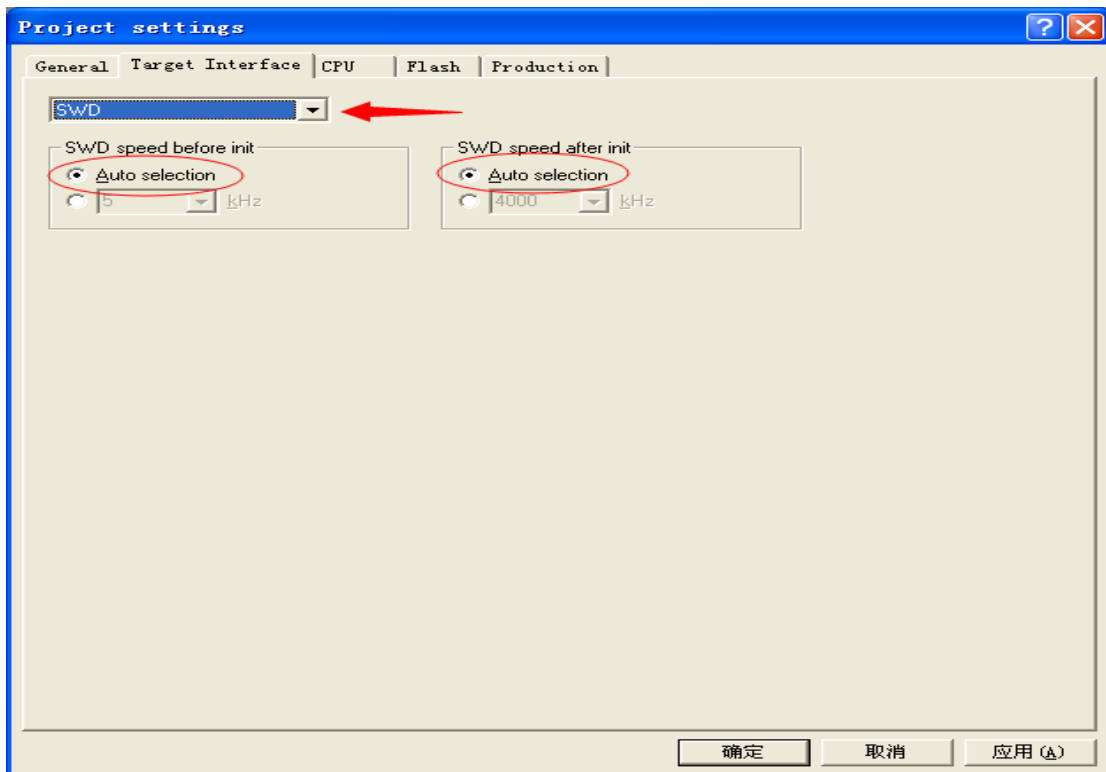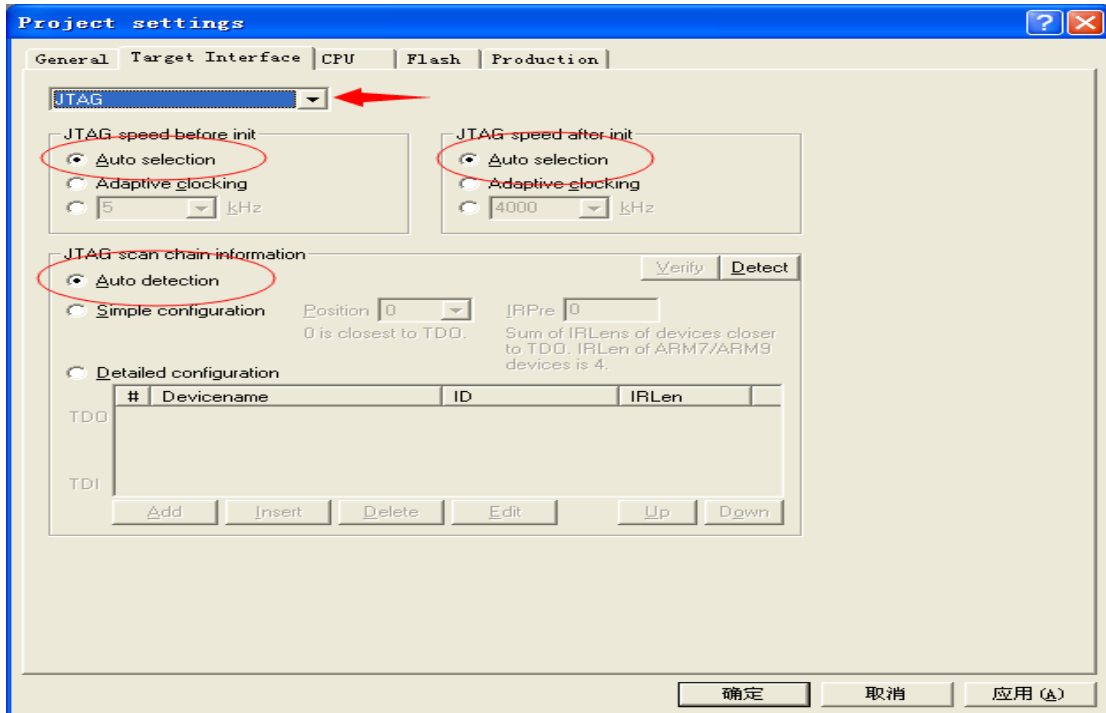

- Click on the CPU button
- Choosing the corresponding Device and setting other as below and save it

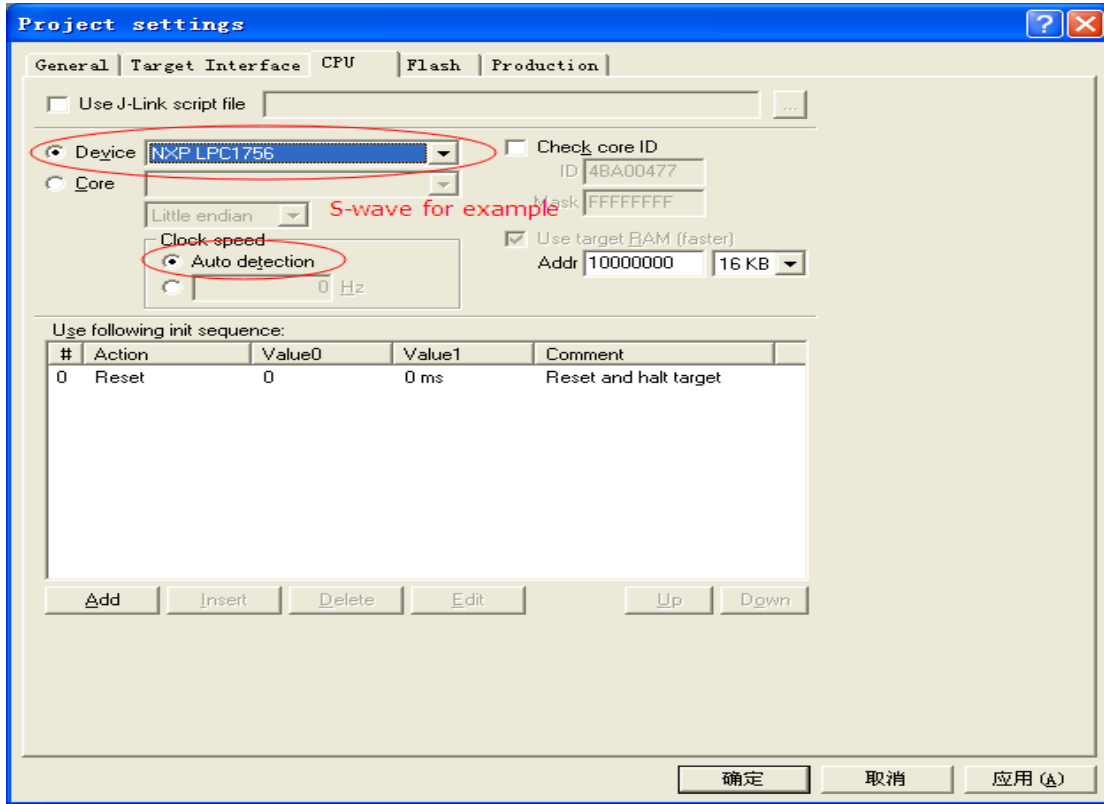


Device choosing as below:

S-wave/1D1R-TS/ 1R-TS/2R-TS/3R-TS: **NXP LPC1756**



CTP: **ST STM32F103VE**

NDP: **ST STM32F103ZC**

Attention for the connecting direction. The connection of the date cable should match the silk-screen direction. Just as below!


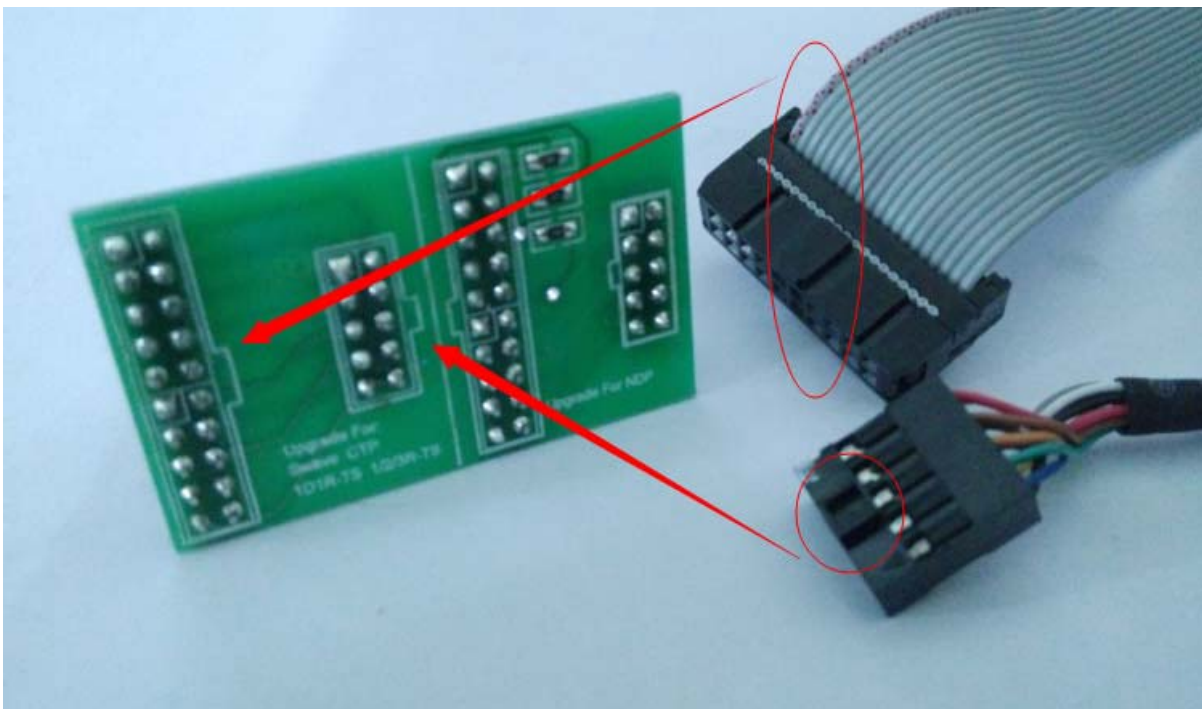


4. Open the corresponding program and burn
 - Click on the **File** button
 - Click on Open data file
 - choosing the corresponding program and open it

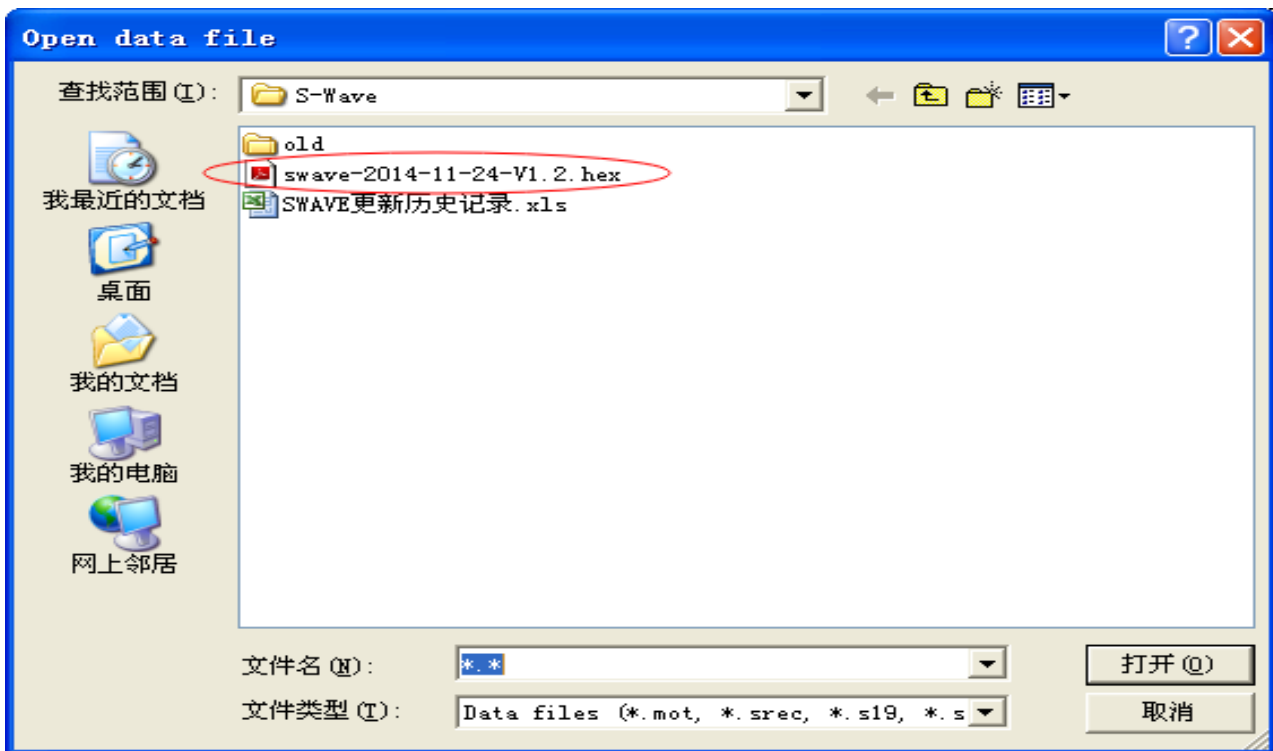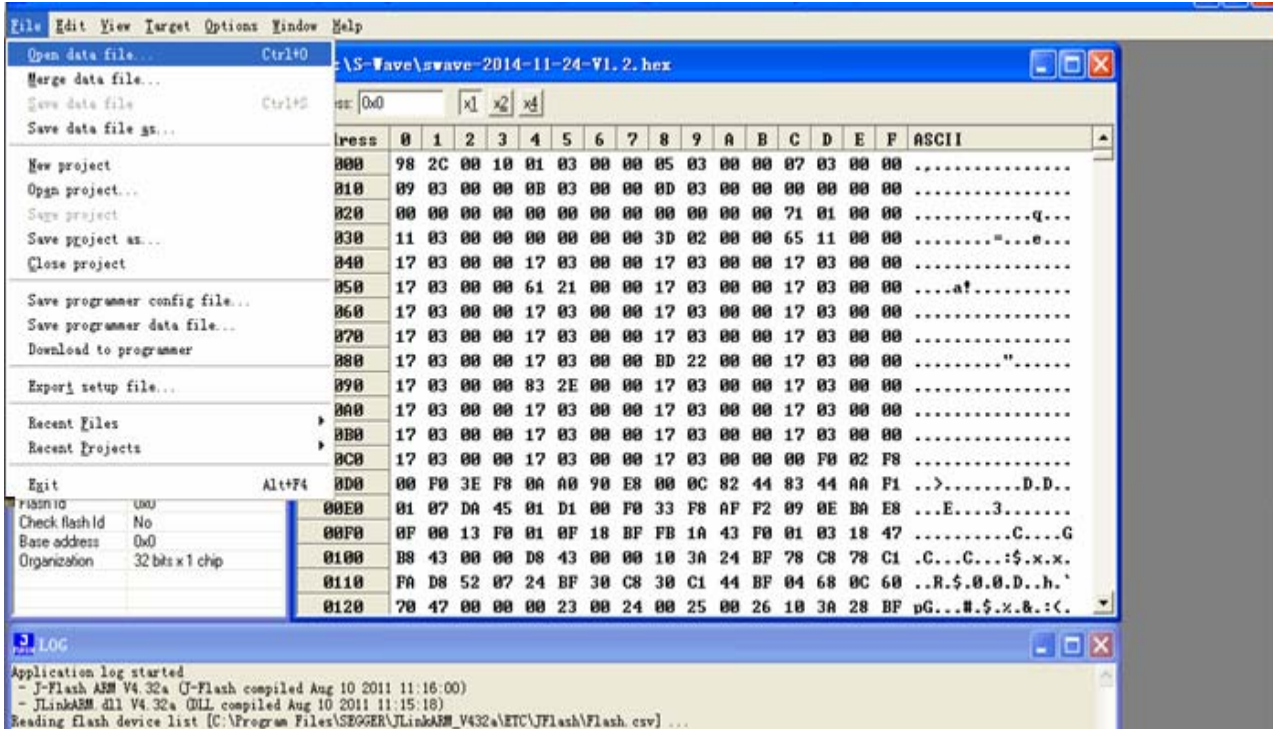

Burning:

- Click on the **F7** button
- Or click **Target** button and then click **Auto** button

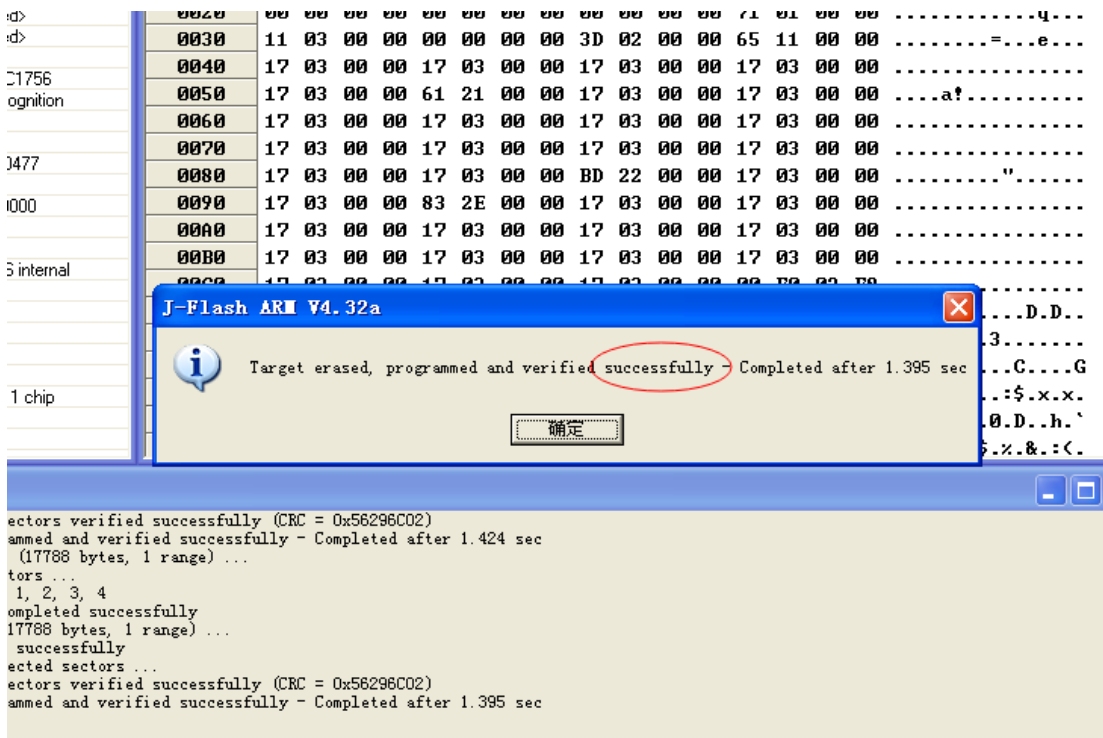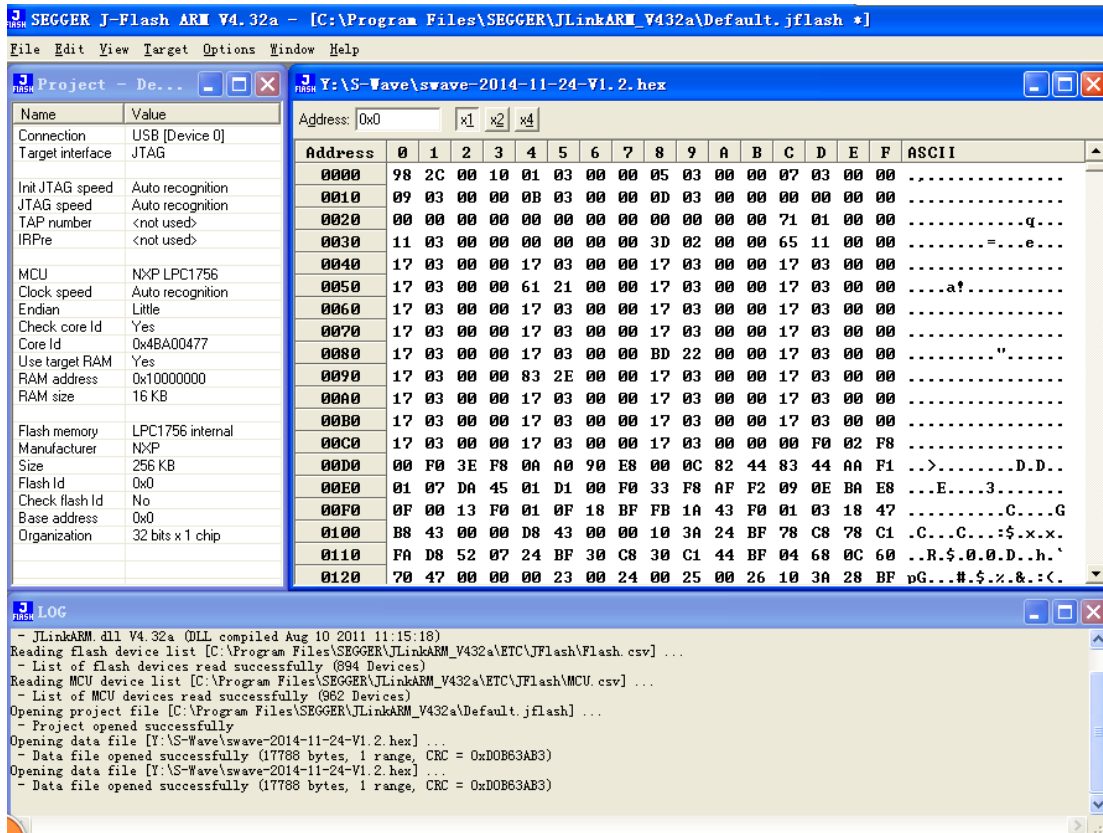

END, Thanks!